

FIG.1
PRIOR ART

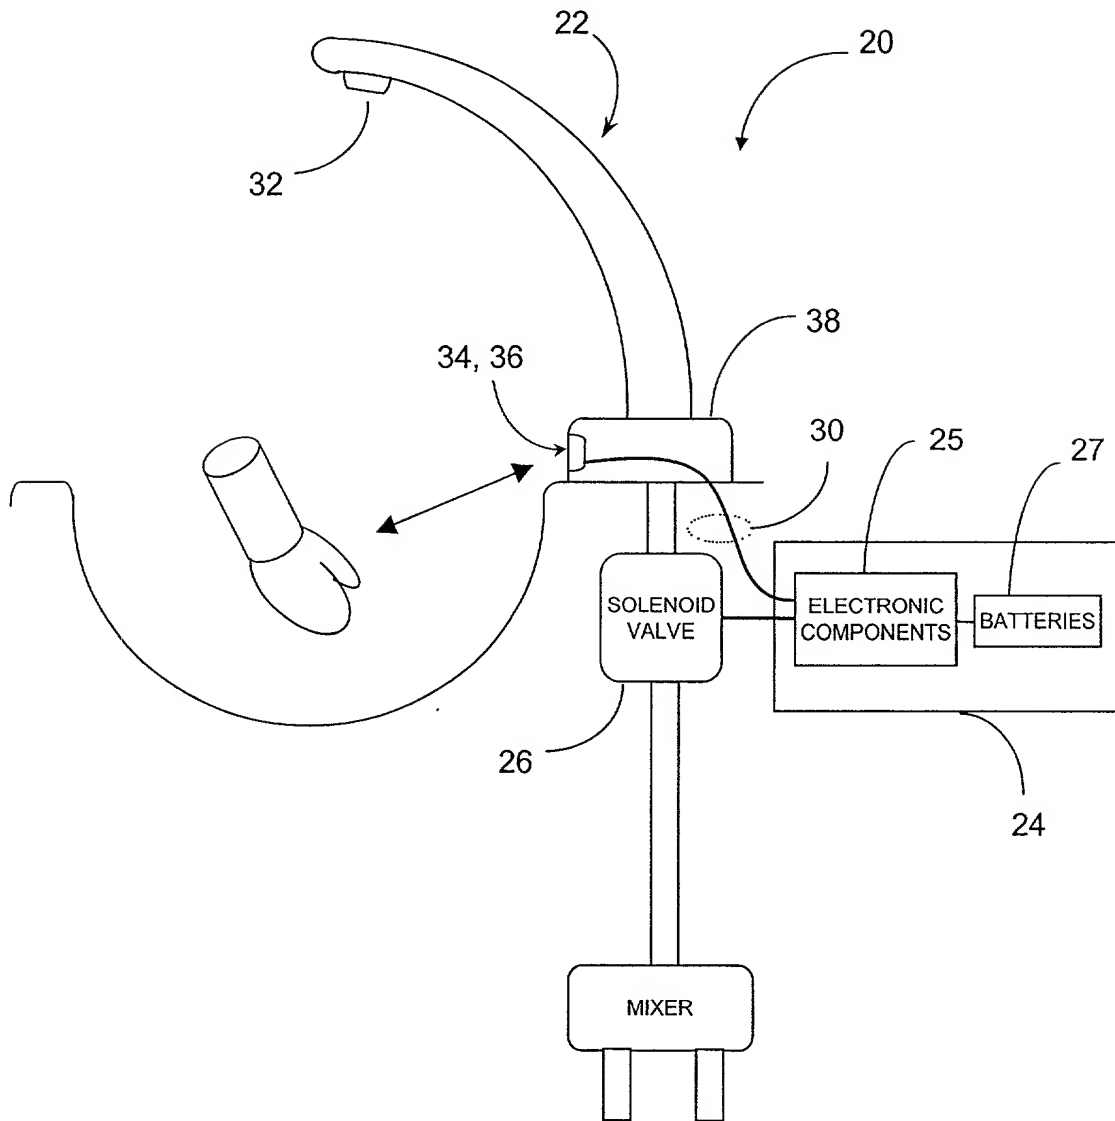


FIG. 2


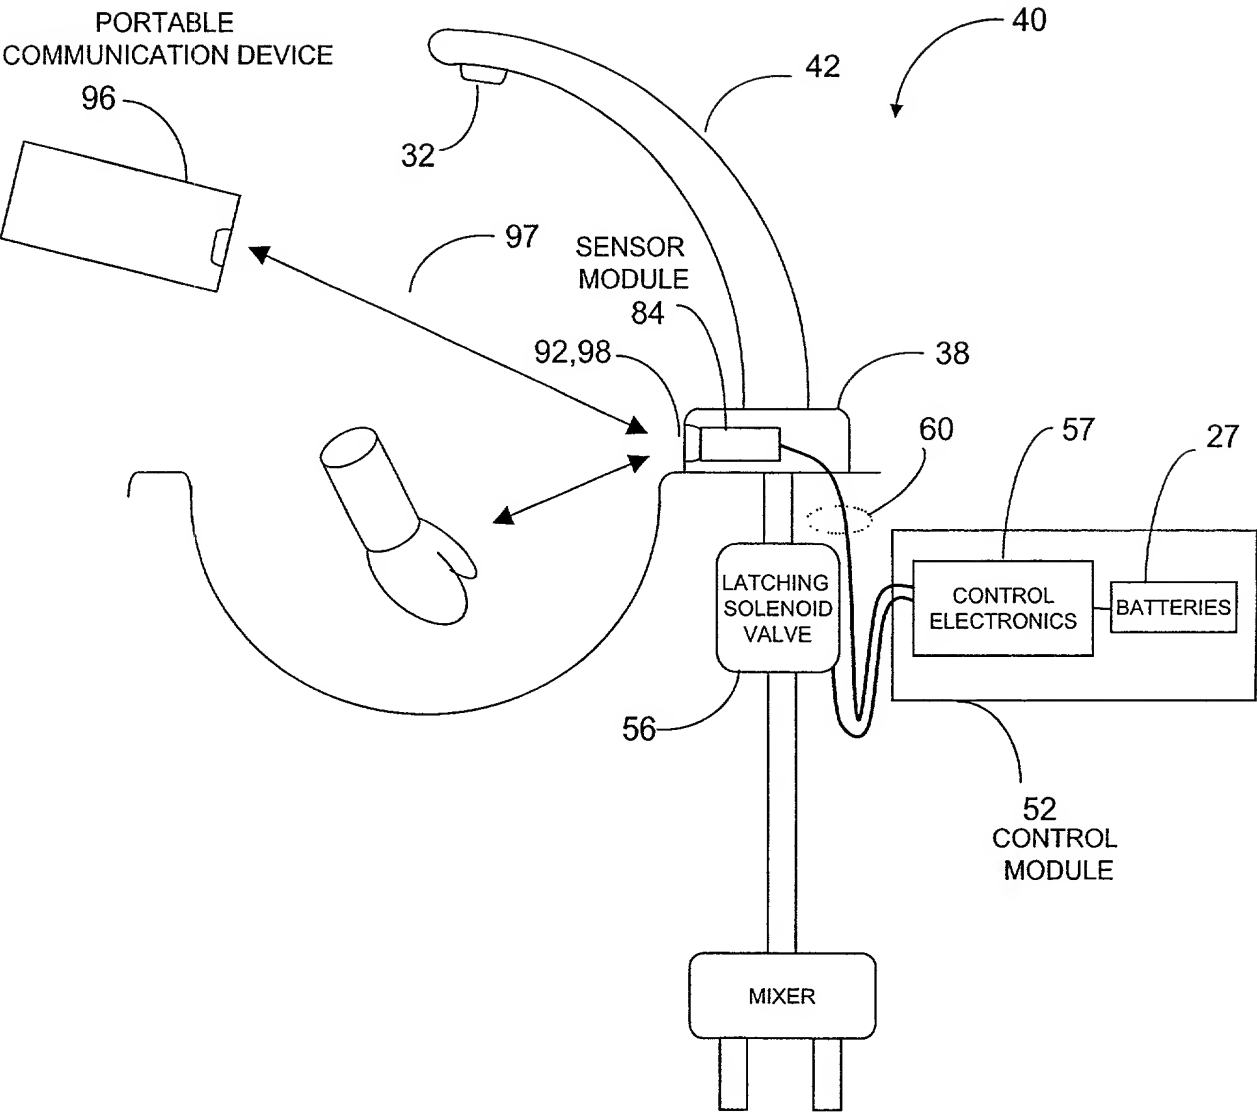


FIG. 3

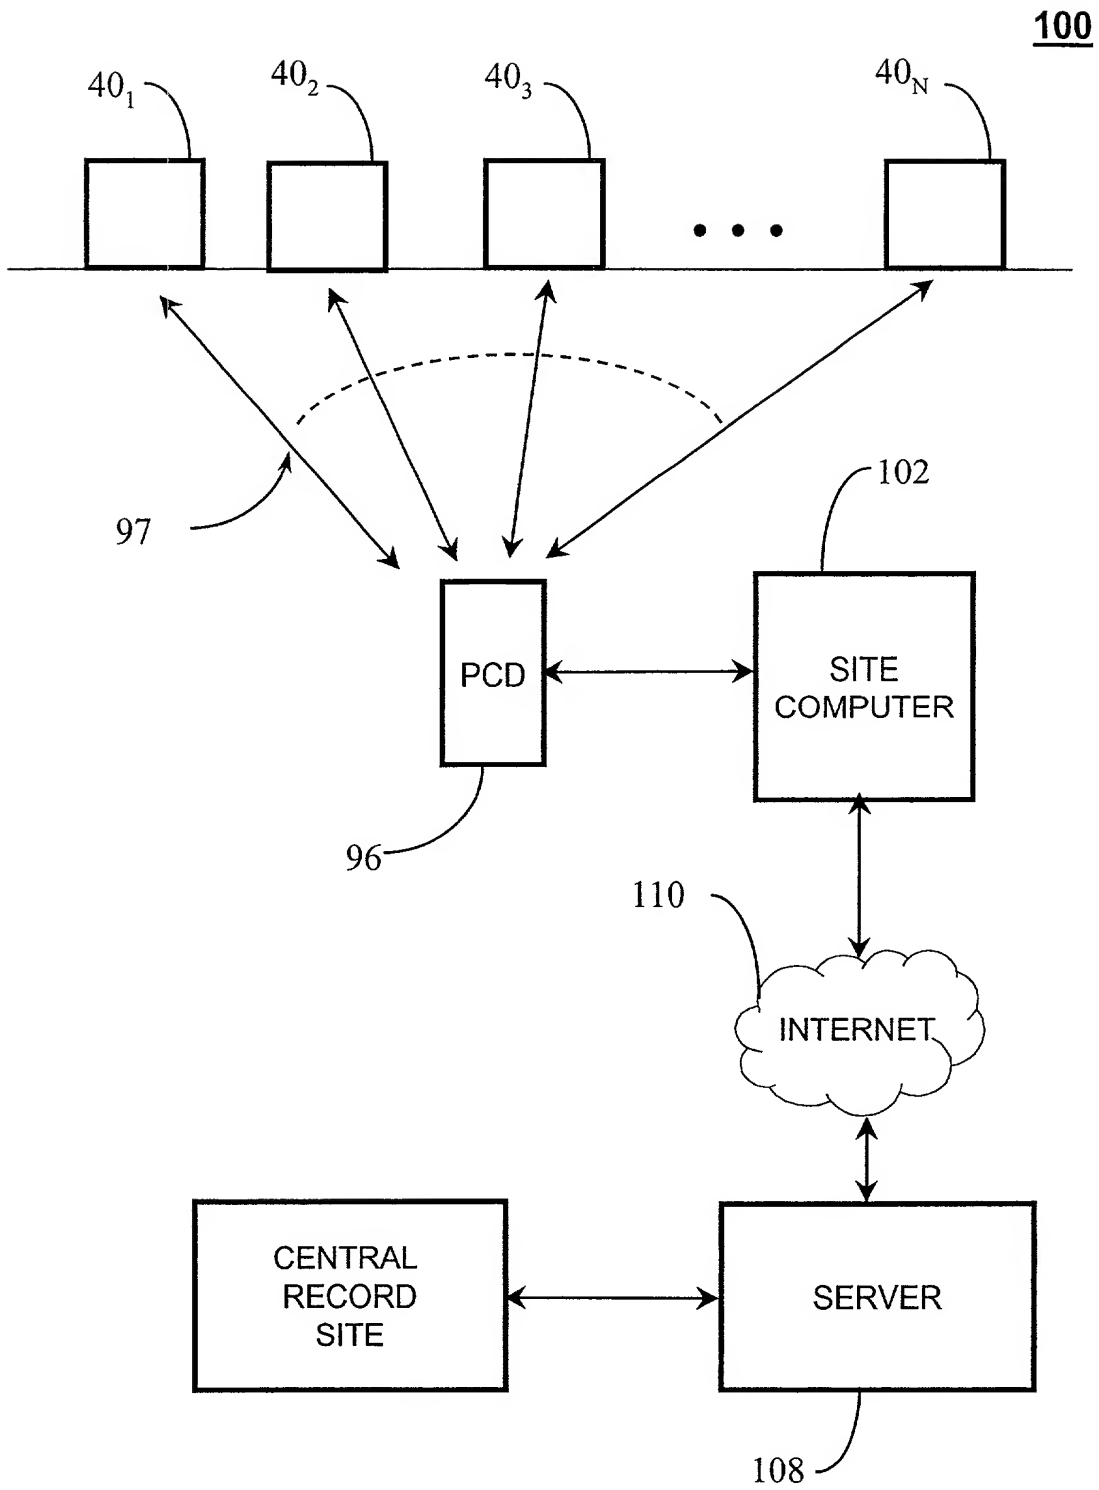

112 FIG. 4a

Synapse Commander

Get Faucet Data

Adjust Faucet

Scan For Problems

Information

Troubleshoot

Help

115 FIG. 4c

Adjust

Range ☐ Short ☐ Far
☒ Normal ☐ Maximum

-2" 0 +2"

Mode ☒ Normal ☐ Metered
☐ Scrub ☐ Water Saver

0 min 3 min

Help Set Other OK

FIG. 4e

Field Replacement Parts Galileo

Mechanical Parts

Lav Spout 570-001KJKCP

Gooseneck Spout GN2AH8JKCP

Gooseneck Flange 170-202KJKCP

4" Coverplate 570-003KJKCP

8" Coverplate 570-008KJKCP

4" Cvrplate/Side-mix 550-018KJKCP

8" Cvrplate/Side-mix 570-135KJKCP

Electronics Miscellaneous

Mechanical Accessories OK

114 FIG. 4b

Information

Review & Modify Your Data

Reference Guide

Field Replacement Parts

Accessories

Contact Synapse

Contact Chicago Faucets

Help Ok

FIG. 4d

GetStatus Rim Palm at Faucet

Serial # 00000000

Overall Status Low Battery

Power Status Dead

Power	Settings	Usage	Location	Misc
Unloaded Volts		0 volts		
Loaded Volts		0 volts		
Time In Use		0 hours		
Replace Battery Date		1/20/03		

Help Note Next OK

FIG. 4f

Reference Guide

MODE DEFINITIONS

NORMAL-Unit turns off 1.5 seconds after hands are removed.

METERED-Unit stays on for 10 seconds and then turns off.

SCRUB-Unit stays on for 60 seconds after removing hands.

WATER SAVER-Unit stays on 5 seconds and then turns off.

Back Next

Common Field Problems OK

FIG. 5

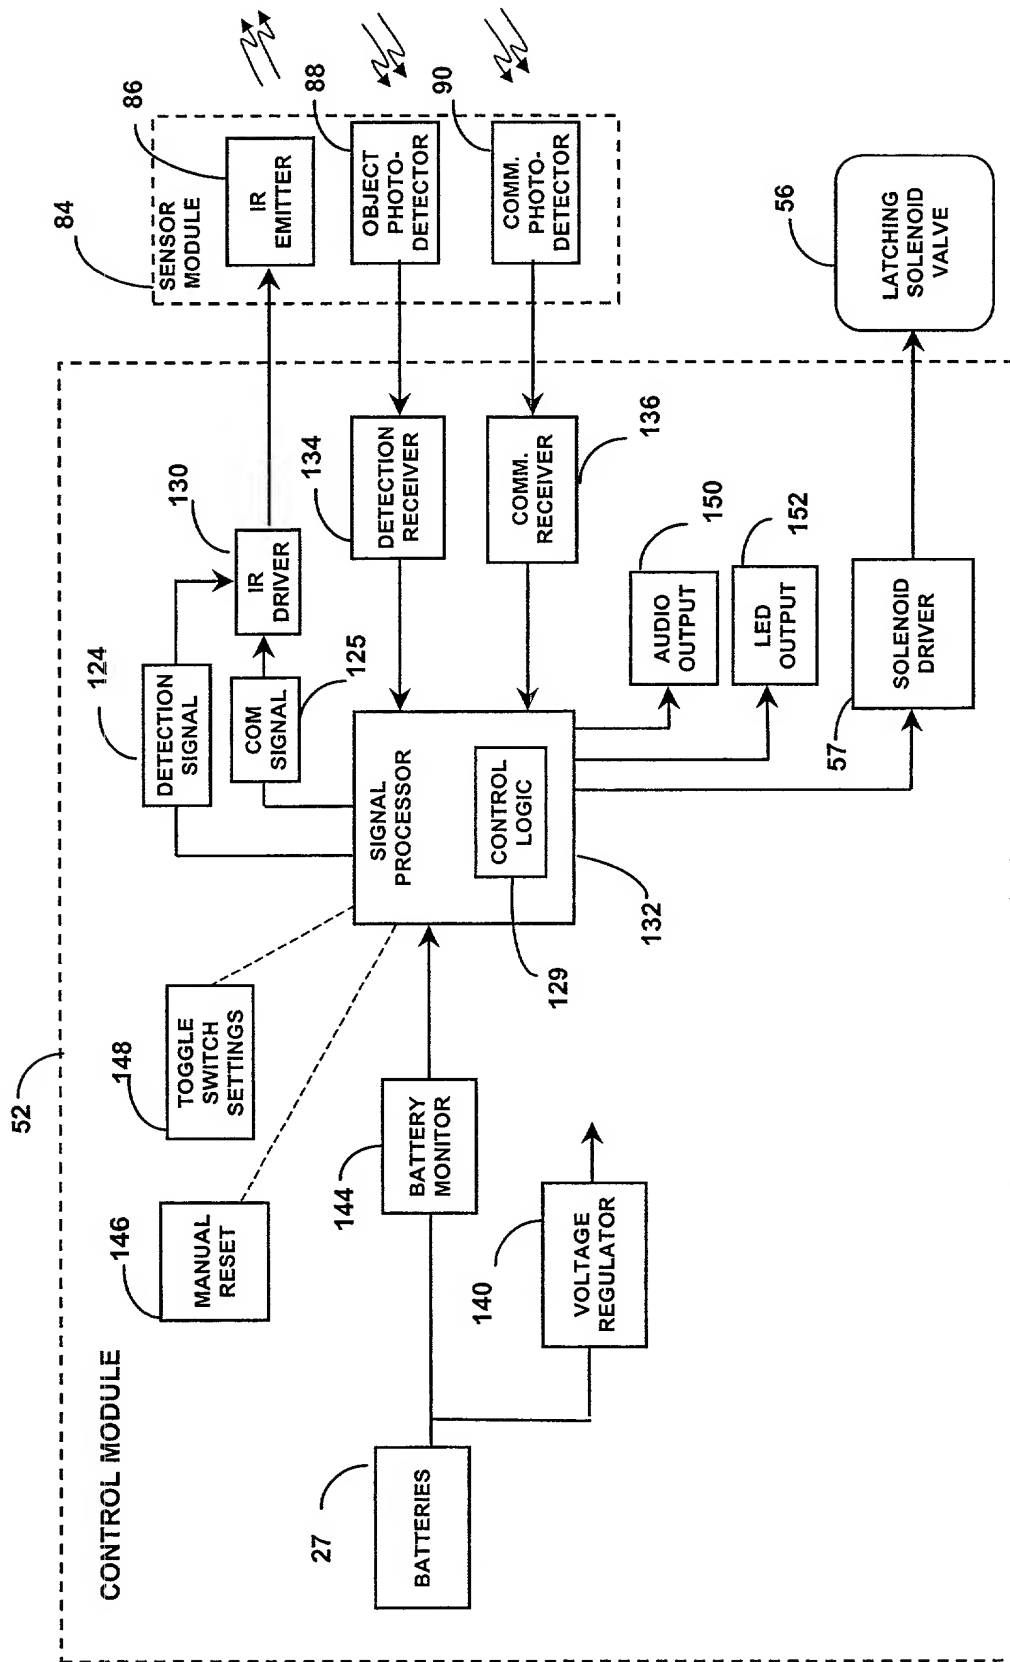


FIG. 6

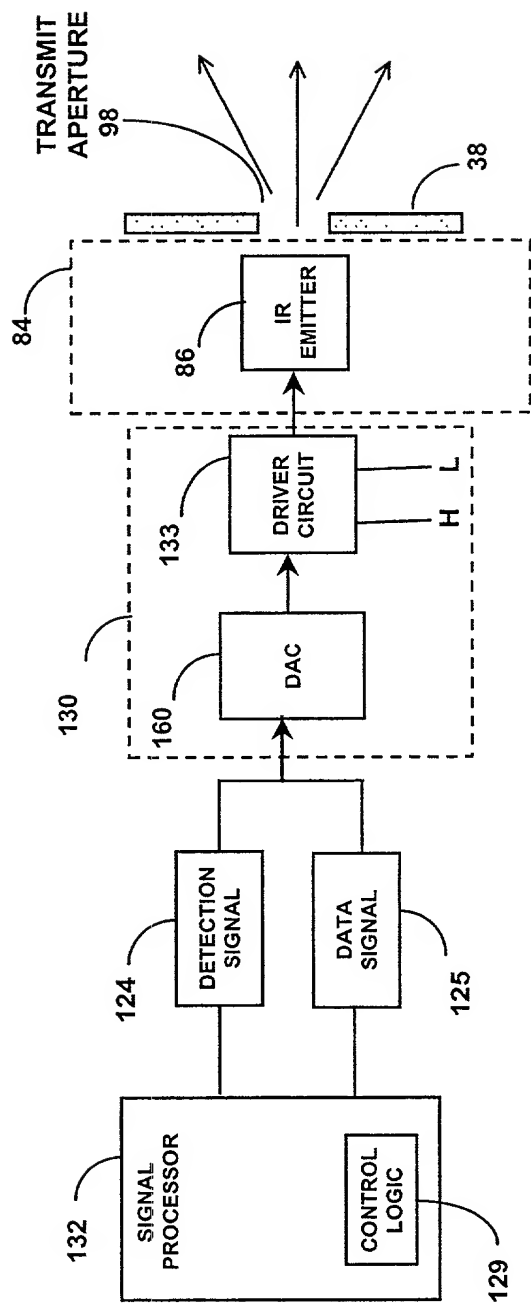
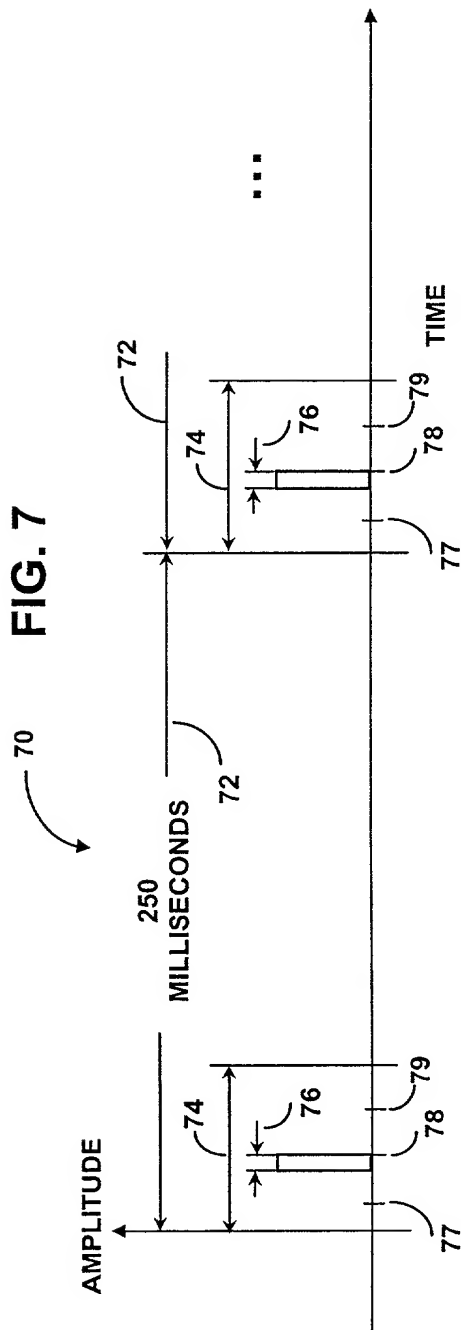
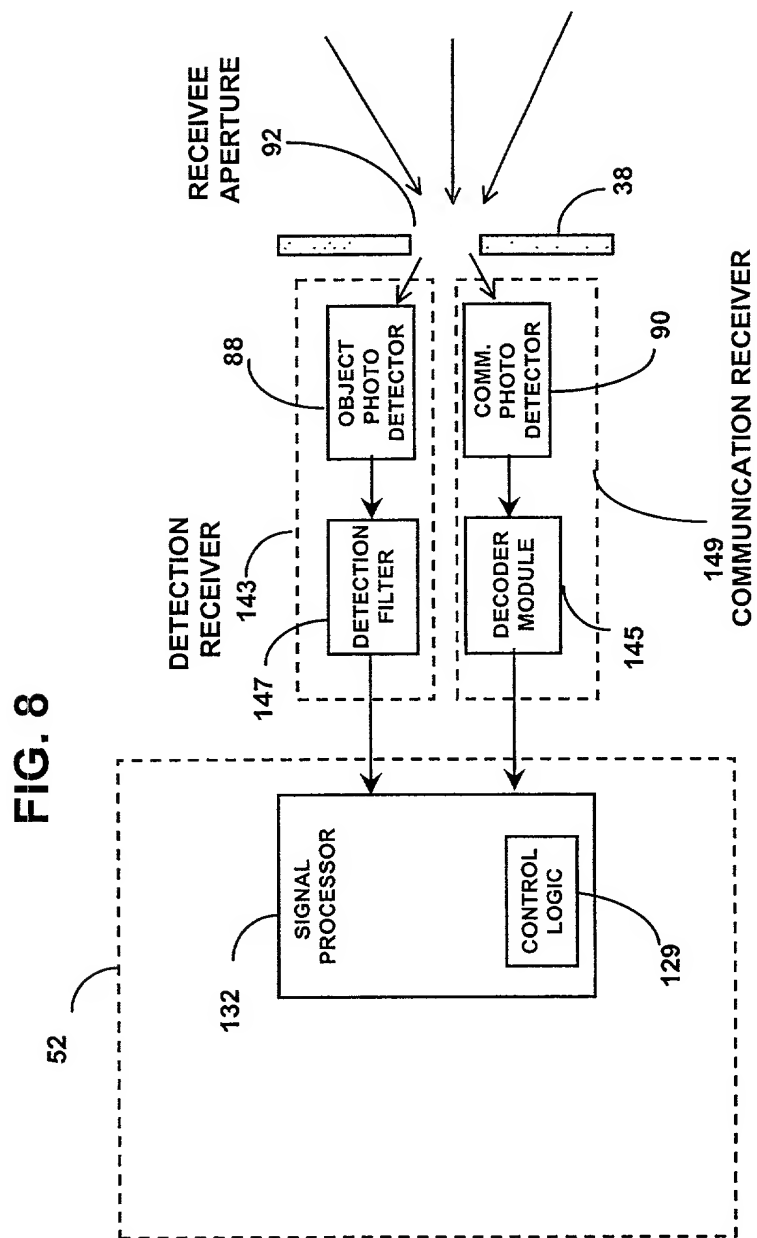


FIG. 7





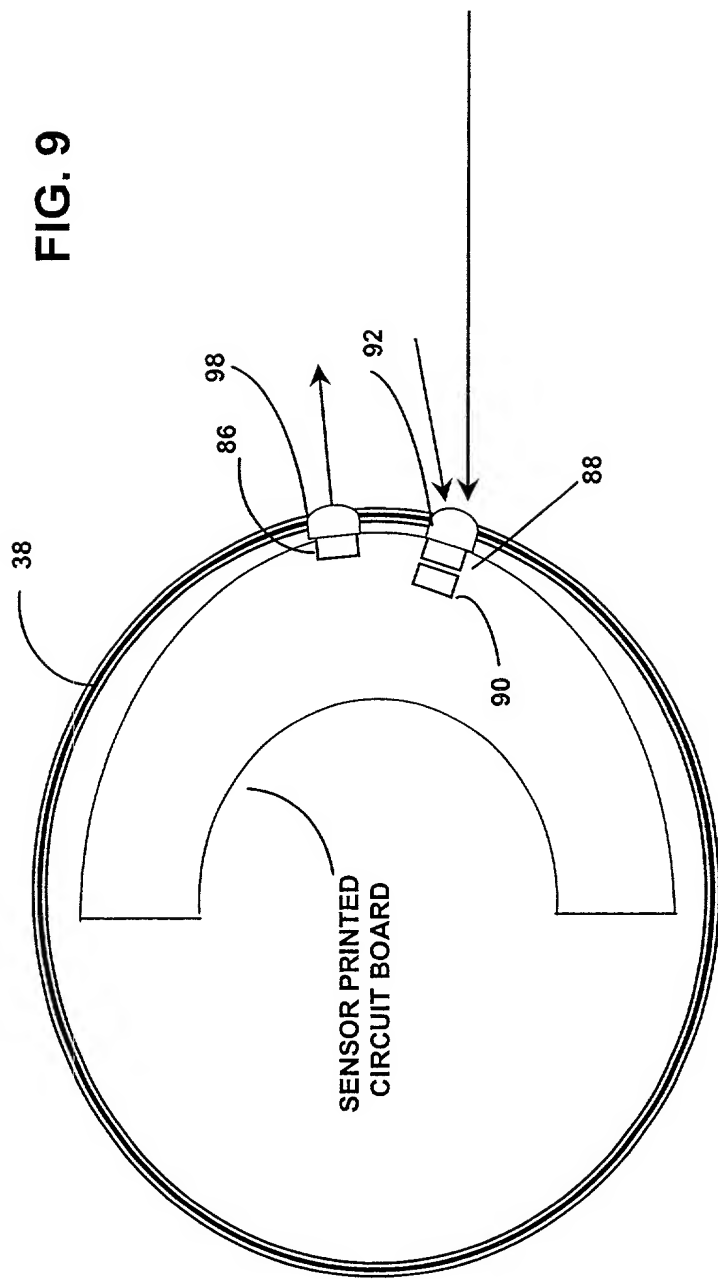


FIG. 10a

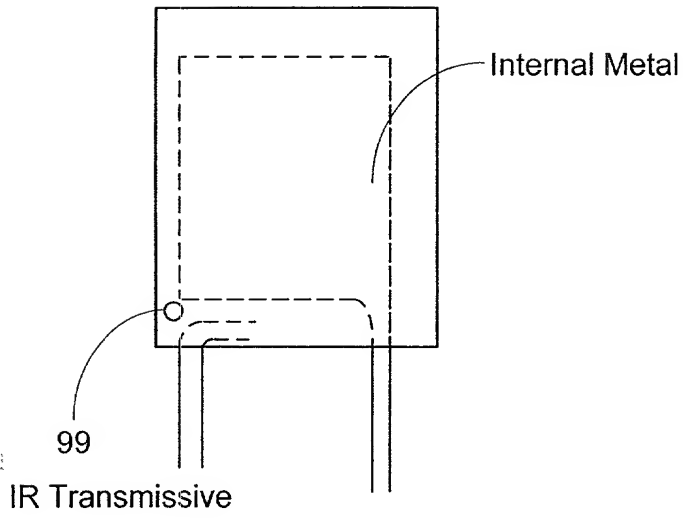


FIG. 10b

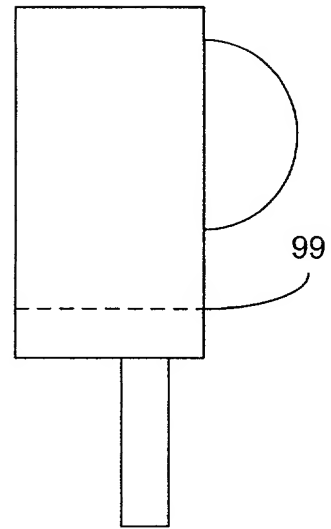


FIG. 10c

